

GNU17v3 has below 5 build optimization options.

- O0 Non optimization
- O1 Basic optimization
- O2 Effectual almost optimization
(Except optimization has big impacts for size)
- O3 Effectual almost optimization
(Most effective for processing)
- Os Effectual almost optimization
(Add size optimization to -O2)


* Default is -O1, because it is decided by the viewpoint of processing efficiency and usability for debug.

* -O2, -O3 options are only for gcc4 version.

Changing C Compiler Optimization Option

Setup Procedure

1. Please select the target project, and select [Project]>[Propaties]

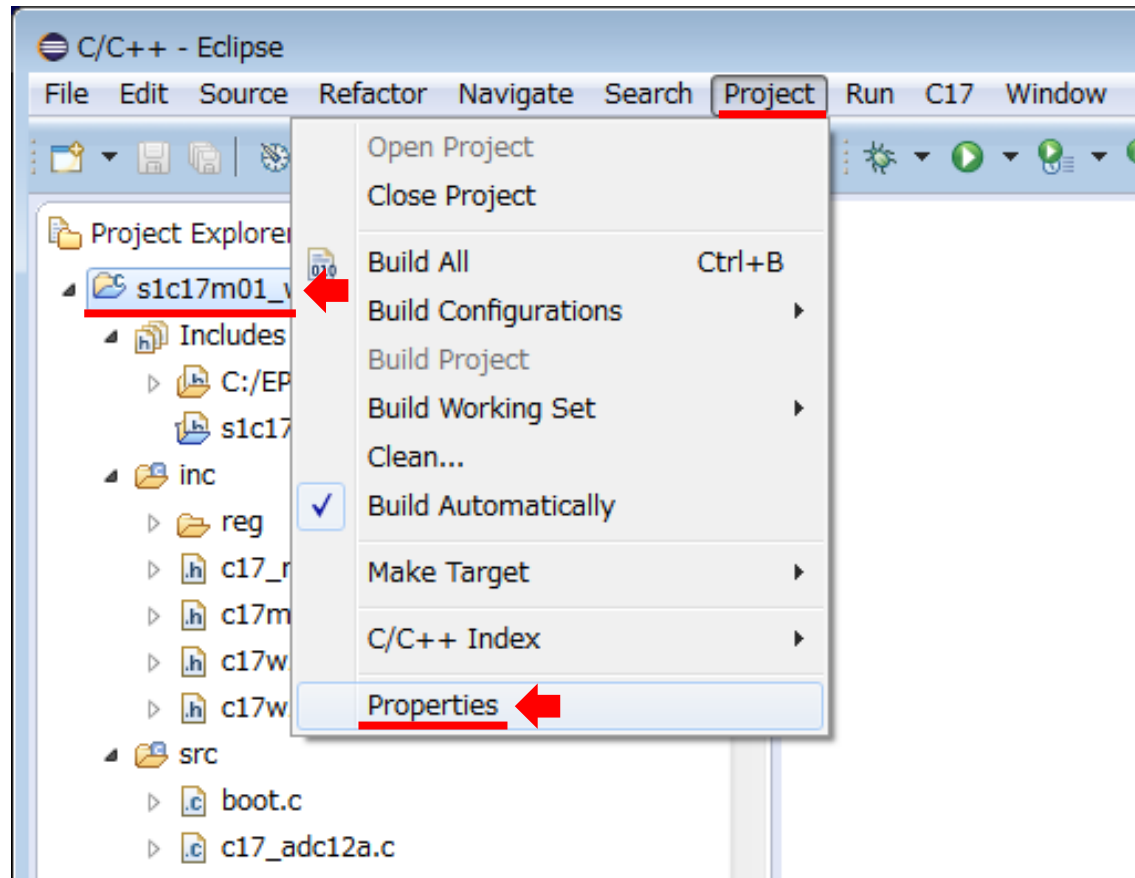

Changing C Compiler Optimization Option

2. Please select [Settings]>[Tool Settings]tab, and select [Cross GCC Compiler]>[Optimization].
3. Please select suitable option from [Optimization Level]menu.

